# OMRON

Model **E3AS-L80M** /200M

Distance-settable photoelectric sensor

## **INSTRUCTION SHEET**

Thank you for selecting OMRON product. This sheet primarily describes precautions required in installing and operating the product.

Before operating the product, read the sheet thoroughly to acquire sufficient knowledge of the product. For your convenience, keep the sheet at your

TRACEABILITY INFORMATION:

Importer in EU: Omron Europe B.V Wegalaan 67-69 NL-2132 JD Hoofddorp, The Netherlands

Manufacturer: Omron Corporation Shiokoji Horikawa, Shimogyo-ku, Kyoto 600-8530 JAPAN

The following notice applies only to products that carry the CE mark.

This is a Class A product. In residential areas it may cause radio interface, in which case the user may be required to be take adequate

© OMRON Corporation 2019 All Rights Reserved

# PRECAUTIONS ON SAFETY

## Meaning of Signal Words

**⚠** WARNING

Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.

**∴** CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.

## **⚠** WARNING

This product is not designed or rated for ensuring safety of persons either directly or indirectly. Do not use it for such purpose.



Do not use the product with voltage in excess of the rated voltage. Excess voltage may result in malfunction or fire.

## $\triangle$ CAUTION

Its component may be damaged and/or degree of protection may be degraded. Please do not apply high pressure water intensively at one place during cleaning.



## **Precautions for Safe Use**

Please observe the following precautions for safe use of the products.

Do not reverse connection of DC power supply polarity. Do not connect

to AC power supply.

•Do not short-circuit the load

•Never use this product with AC power supply. Otherwise it may explode.

•The maximum power supply voltage is 30 VDC. Before turning on the product's power, make sure that the supply voltage does not exceed the maximum power supply voltage.

•Do not use the product in environments where flammable or explosive gases are present.

•Please assess the safety beforehand when using the product in

chemicals and/or oil environments.

•Do not remodel the product.

## **Precautions for Correct Use**

Do not hit the product using a hammer for installation.
The product must be installed with the specified torque or less.

For M8 connector and Pre-wired M8 connector the proper tightening torque is from 0.3 to 0.4 N×m. In case of M12 smartclick connector, manually tighten the connector.

•Do not use the product in ambient atmosphere or environment exceeding the rating.

•Output pulses may be generated when the power is turned off. It is recommended to turn off the power of the load or load line first. •The extension of the cord under the standard I/O mode should be 100m.

Under the IO-Link mode, the length should be 20m or less.

•Do not pull the cord too strongly. •Please wait for at least 100 ms after turning on the product's power until it is available for use.

•The product is rated as IP67 but please avoid using the product underwater, under rain, and outdoors.

•If wiring product's cables and/or cords in the same piping or duct of high voltage cables or power lines may cause malfunction or breakdown due to induced noise. In principle the cables and cords of the product must be separately wired from the power lines, or otherwise shielded. Do not use the product in direct sunlight

•Do not use the product where humidity is high and dew condensation

•Do not use the product where corrosive gases may exist.

•If high-pressure washing water and so on hits the teach button, it might lead to malfunctioning. So, consider use of the key lock function.

• Do not apply high-pressure washing water directly to the sensor's light emitting / receiving surface from a short distance. As the antifouling feature may be impaired, keep a sufficient distance from the light emitting / receiving surface.

•Do not use the product at a location subject to shock or vibration.

•To use a commercially available switching regulator, FG (frame ground) must be grounded.

•This product cannot be used as a detection device for human body

Do not use organic solvents (e.g. paint thinner and alcohol) for cleaning. Otherwise optical properties and protective structure may deteriorate.

Be sure to check the influence caused by surrounding environments such as background objects and/or LED lighting before using the


•Please discard the product as industrial waste at the time of disposal.

Dispose in accordance with applicable regulations.

## Package contents


Instruction sheet (this sheet), compliance sheet, index list (attached for IO-Link type only)

1	1 Installation		
1-1	Installation of the sensor		
	<size (unit:="" holes="" installation="" mm)="" of=""></size>		
	Reference surface ← Direction toward emitter/receiver		

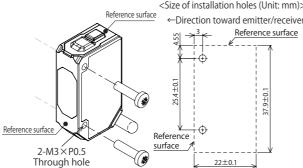

Mounting brackets are sold separately. Tightening torque for the mounting hole is 0.5 N×m or less (M3 screw).


• Do not touch the emitter and/or receiver block of the sensor. Fingerprint deposits may result in improper measurement. If accidentally touched, please wine gently may result in improper measurement. If accidentally touched, please wipe gently with a dry cloth.Do not use organic solvent (e.g. paint thinner and alcohol). If the object to be detected has a mirror surface, please install the product so that specular reflection light does not directly enter the light receiving block.

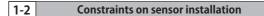

(Detection close to a wall)

Not easily affected by reflection

Easily affected by reflection from the wall, resulting in fluctuation of detection values. \*(To detect a workpiece with

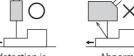

level difference)

Stable detection is available even for the level difference part.

from the wall.

Abnormal detection value may appear at the level difference part.

Detection is not

and/or receiver is


possible if the emitter

### <Installation interval>

This product does not have any functions to prevent mutual interference. Keep a constant interval or longer between the emitting center of one sensor and the receiving center of the other sensor to prevent mutual

• Interval between emitting and receiving centers (reference values) E3AS-L200□: Approx. 120 mm min. E3AS-L80□ : Approx. 50 mm min.

For the detailed outline drawing, refer to the data sheet.

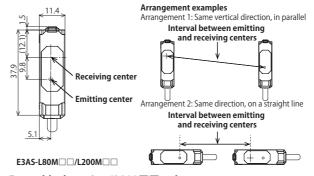

<For stable detection \*L200 □ □ only>



Model Output

2-1

Please install the sensor with tilt. (Recommended angle: 10°)

•Be sure to check the influence caused by surrounding environments such as background objects and/or LED lighting before using the

I / O stage circuit diagram

### 2 Connection


- 1	1110000	Output	o at par en eare	
	E3AS- □□N□	NPN	OUT1 Black load 100 mA load 100 mA OUT2 White OV 3 Blue 10 to 30 VDC	
	E3AS-	PNP/COM  Standard I/O  Mode	Brown OUT1 4 Black 10 to 30 VDC OUT2 2 White 100 mA 0 100 mA 0 0V max.	
	or E3AS- □□T□	PNP/COM□ IO-Link Mode	+V DBrown +V C/Q Black C/Q DO White DI/DO IO-Link Master	

Standard I/O mode is used as PNP ON/OFF output.


•IO-Link mode is used for communications with the IO-Link master.

C/Q performs IO-Link communications. sensor output DO performs ON/OFF output. Detailed information of model and specification are described in 5.Model Standard and 6.Ratings and Specification


#### 2-2 Connection method

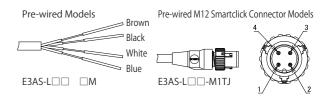

M8 Connector Models

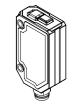

Pre-wired M8 Connector Models

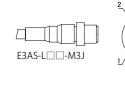

E3AS-L□□ M3

•The extension of the cord under the standard I/O mode should be 100m or less. The extension of the cord under the IO-Link mode should be 20m

#### 2-3 Sensor I/O connector cord

M8 socket connector cord XS3F/W-M8PVC (screw type)



XS5F/W-D4 = - 80-F/X/XR (smart click) / M12 socket connector cord XS2F/W-M12PVC (screw type)




•The connector of each type is used in combination with the sensor I/O's connector cord.

E3AS-L — -M1TJ (smart click) can be connected with connector cord XS2F series by screwing.


•The connector cords shown here are UL certified products.Connector cords that are not UL certified are also usable. But in this case, sensor/cord combination is not UL certified product.

### 2-4 About allowable bending radius of cord

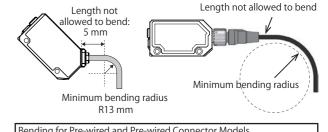

bending for Pre-wired and Pre-wired Connector Models						
Material		External	Minimum bending	Length not allowed		
		diameter	radius: mm	to bend: mm		
PVC		Φ4	13	5		
Bending of se	Bending of sensor I/O connector cord					
Model	Material	External	Minimum bending	Length not allowed		
		diameter	radius: mm	to bend: mm		
XS3F-M8PVC	PVC	Ф5	36	0		
XS2F/W-D4-F	Incombustible robot	Ф6	40	0		
XS5F/W-D4-F	Incombustible robot	Φ6	40	0		
XS5F/W-D4-X	Highly oil-resistant PVC		40	0		
XS5F/W-D4-XR	Highly oil-resistant robot PVC	Φ6	40	0		



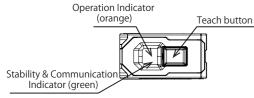

The indicators work differently depending on sensor status.


### Key lock (Button lock) 3-2

It prevents accidental button operation.


[To lock] Press and hold the Teach button for over 5 seconds but less than 10 seconds. [To unlock] Press and hold the Teach button for over 5 seconds but less than 10 seconds. \*When the Teach button is pressed under the button lock status, the orange and green indicators continue to flash quickly (0.2 second cycle) and simultaneously for 3 seconds.

## About teaching function (for output 1)

## ①To specify a threshold value for presence and non-presence of an object

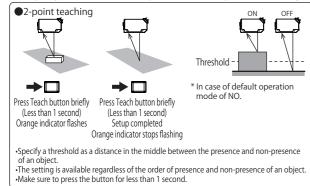

## ②To specify a threshold value for non-presence of an object

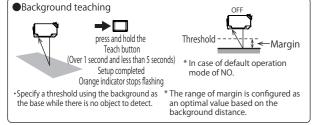

Initial value of set point 1:L80□/50, L200□/100

## Indicators' behavior when the button is operated

	State	Orange indicator	Green indicator	
NPN,	Teaching in progress	Flashing (1 second cycle)	ON	
PNP/COM	Teaching succeeded	Flashing (0.6 second cycle)*1		
Standard I/O	Teaching error	High-speed flashing		
Mode		(0.2 second cycle) *2		
DND/COM	Teaching in progress			
PNP/COM IO-Link Mode	Teaching succeeded	Output 1 state continues.	Flashing	
10 Ellik Wlode	Teaching error			

- \* 1 1.2seconds two times flashing
- \* 2 3seconds fifteen times flashing

•When the button is operated, the output state continues. If teaching is performed by the command, indicators do not change.


When performing teaching, threshold values are recording in EEPROM(non-volatile memory) in the sensor. The writing life of EEPROM is 100,000 times. Be careful of writing life when performing measurement-by-measurement teaching.

### 3-4 If a teaching error occurred

Confirm the following two items.

- 1. Confirm that the object is within the measurement range.
- 2. Widen the distance between the first and second points of two-point teaching.

## 3-5 Display specification (measurement status)

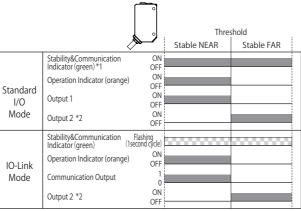

Shown above are the factory settings. Refer to the index list for the default settings at time of shipment from factory.

PNP/COM output logic can be reversed by IO-Link communication.

The operation indicator (orange) lights up when output 1 is ON or communica-

\* 1 Turns off when there is insufficient margin for incident light. In that case, place the workpiece closer to ensure sufficient receiving light intensity.

\* 2 The initial value of output 2 is reverse of output 1.

4	Errors and Actions				
Indicator Orange Green		Error details	Possible causes	Action and correction	
Quick flashing	Quick OFF load short- The outp		The output line is short-circuited.	Check the wiring.	
OFF	Quick flashing	EEPROM error	Sensor's setting memory is abnormal.	Initialize the setting values. Press and hold the Teach button for over 5 seconds.*1	
Orange and green indicators alternately flash quickly		Breakdown error	The sensor itself may be out of order.	Restart the sensor (turn the power off and on again). If the error remains, replace the sensor.	

Quick flashing cycle is 0.2 seconds.

\*1 This operation is valid only when an EEPROM error occurs. Normally, it functions as a key lock (section 3-2).

## Model standard



①Sensing method	L:Triangulation
OS-main m distance	80: Sensing distance of 80 mm
②Sensing distance	200: Sensing distance of 200 mm
③Emission spot shape	Blank: Spot
④ Light source	Blank: Red
⑤Case material	M: Metal
	N: NPN open collector
@Output method	D: PNP open collector/COM2
	T: PNP open collector/COM3
	Blank: Pre-wired
	-M1TJ: Pre-wired M12 Smartclick Connector
©Connection method	-M3J: Pre-wired M8 Connector
	M3: M8 Connctor
®Optional suffix	Special specification (alphanumerical character)
©Cada la sath	Blank: M8 Connector
	2M, 5M, 0.3M (unit: m)


# **Ratings and Specifications**

Sensing m	nethod		Triangulation			
NPN output		tput	E3AS-L200MN series	E3AS-L80MN series		
Model	PNP output/COM2		E3AS-L200MD series	E3AS-L80MD series		
	PNP output/COM3		E3AS-L200MT series	E3AS-L80MT series		
Sensing di	istance		White or black paper (100 X 100mm): 10 to set distance	White or black paper (100 X 100mm): 10 to set distance		
Setting rai	nge		White or black paper (100 X 100mm):40 to 200mm	White or black paper (100 X 100mm):20 to 80mm		
Differentia	al travel		10%max. of set distance	White paper: 2% max. of set distance Black paper: 5%Max. of set distance		
B/W Error			10% max. of set distance	5% max. of set distance		
Spot size (	reference	e value)	25 × 25mm at distance of 200mm	DIA 4mm max. at distance of 80mm		
Light sour	ce (Wave	length)	Red LED (624nm)	Red LED (650nm)		
Power sup	ply volta	ge	10 to 30 VDC, (inclu	uding ripple (p-p) 10%), Class2		
Current co	nsumption	on	35mA max.			
			Load power supply voltage: 30VDC max., Class2, Load current: 100mA max.			
		Output	Residual voltage: Load current less than 10	OmA: 1V max. ,Load current 10mA to 100mA: 2V max.		
Input/Out	put		Open collector output	(NPN/PNP depending on model)		
		NPN	OUTPUT 1: NO, OUTPUT 2: NC			
		PNP/COM2 PNP/COM3	OUTPUT 1: NO /COM□, OUTPUT 2: NC			
Protection	circuits		Reversed power supply polarity protection, Output short-circuit protection, and Reversed output polarity protection			
Response	time		Operate or reset: 1ms max.			
Distance s	etting		Teaching method/IO-Link communication			
Ambient il	lluminatio	on	Illumination on received light surface: Incandescent lamp: 3000 lx max., Sunlight: 10000 lx max.			
Ambient t	emperati	ire range	Operating: -25 to +55°C (with no icing or condensation) Storage: -40 to +70°C (with no icing or condensation)			
Ambient h	numidity i	range	Operating: 35 to 85%RH, Storage: 35~95%RH (with no condensation)			
Insulation	resistanc	e	20 MΩ min. at 500 VDC			
Dielectric	strength		1,000 VAC at 50 / 60 Hz for 1 minute			
Vibration	resistance	2	Destruction: 10 to 55 Hz, 1.5mm double amplitude for 2 hours each in X, Y, and Z directions			
Shock resi	stance		Destruction: 500 m/s² for 3 times each in X, Y, and Z directions			
Enclosure	ratings		IP67 (IEC60529), IP69K (ISO20653)			
Indicator			Stability/Communication indicator (Green*1), Operation indicator (Orange) *1:1/O-Link mode: Blinking			
Size			H39.4mm×D22mm×W11.4mm Mounting hole pitch 25.4mm			
		Case		SUS316L		
Material		Indicator	Polyamide 11 (PA11)			
		Lens Cover	Methacrylic resin (PMMA)			
Communica specification		IO-Link specification		Ver1.1		
		Baud rate	COM3:230.4kbps ,COM2:38.4kbps			
	ons	Data length	PD size: 1byte, OD size: 1byte (M-sequence type: TYPE_2_1)			
		Minimum cycle time		.2ms ,COM2:3.5ms		
Accessories			Instruction manual (this sheet), compliance sheet and index list(attached for IO-Link type only)			

## Suitability for Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

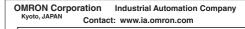

Regional Headquarters

MRON EUROPE B.V.
Wegalaan 67-69, 2132 JD Hoofddorp
The Netherlands
Tel: (31)2356-81-300/Fax: (31)2356-81-388

MRON ELECTRONICS LLC

2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

MRON ASIA PACIFIC PTE. LTD.

Oninon ASIA PACIFIC PTE. CTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2),
Alexandra Technopark,
Singapore 119967
Tel: (65) 6835-3011/Fax: (65) 6835-2711

lei: (65) 6835-3011/Fax: (65) 6835-2/11

OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tei: (86) 21-5037-2222/Fax: (86) 21-5037-2200

D(t) Jun, 2019